




Steel 18' x 18' / 40 psf Carport Installation Instructions

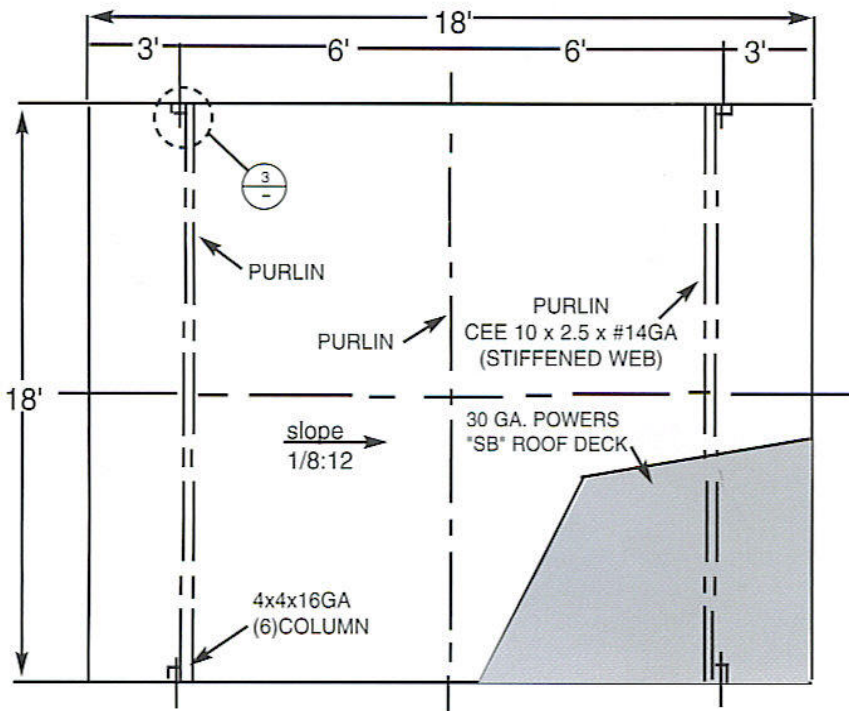

ROOF FRAMING PLAN

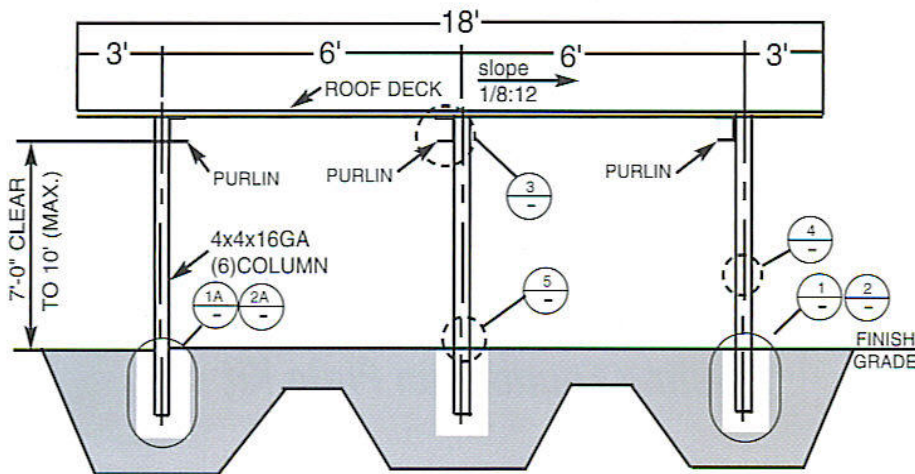

CROSS SECTION

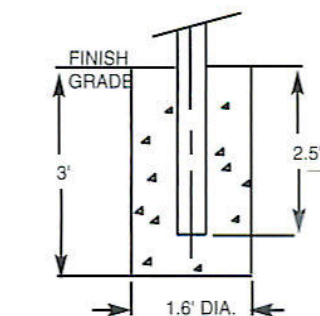

CAISSON FOOTING



ESTERN STATES DECKING, INC.

Immediate Availability

901 W. Watkins St.
Phoenix, AZ 85007


Phoenix Sales: (602) 271-0550
(800) 545-9681
Yard: (602) 495-0048

ASSEMBLY INSTRUCTIONS

SET COLUMNS IN HOLES AND RUN STRING LINES AT GROUND LEVEL AND TOP OF THE COLUMNS. ALIGN COLUMNS AND CHECK DIAGONAL DIMENSIONS TO BE SQUARE. FILL HOLES WITH CONCRETE AND POSITION THE COLUMNS FOR THE ROOF SLOPE USING A LEVEL TO PLUMB AND STRING LINES FOR HEIGHT AND ALIGNMENT. WHEN CONCRETE IS CURED SCREW PURLINS TO THE COLUMNS AND ROOF DECK TO THE PURLINS.

NOTES

THIS PRODUCT IS VERY FLEXIBLE AND DIFFERENT TECHNOLOGIES CAN BE USED. DO NOT LEAVE COLUMNS WITHOUT PROPER BRACING. EACH SHEET PROVIDES 36" OF COVERAGE IN WIDTH.

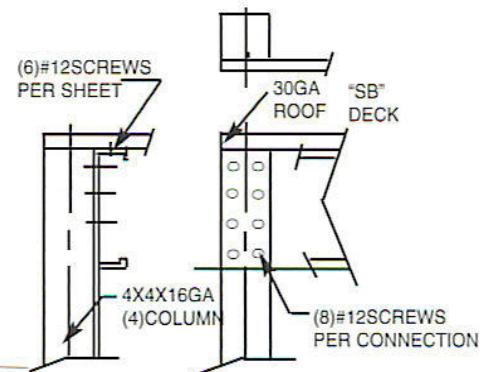

PURLIN TO COLUMN